

WARRANTY INFORMATION

During the applicable warranty period, any Total Protection Solutions™ surge protector device which fails due to a defect in materials, workmanship or any electrical anomaly including lightning, shall be repaired or replaced, at Joslyn's option without charge. In the event of a return the device must be shipped FOB Joslyn place of business within the applicable warranty period. The applicable warranty period for this Joslyn surge protection device is outlined below in the Warranty Period section. The warranty period for any repaired devices or replacement devices will be only the remaining portion of the original limited warranty.

A Return Material Authorization (RMA) number must be obtained from the Company's Customer Service department before returning any products.

The Company shall have no liability under this warranty for problems or defects directly or indirectly caused by misuse of the Product, alteration of the Product (including removal of any warning labels), accidents, improper installation, application, operation, or improper repair of the Product.

THIS WARRANTY REPRESENTS THE ENTIRE WARRANTY OF THE COMPANY. ALL OTHER WARRANTIES EXPRESS OR IMPLIED, ORAL OR WRITTEN, INCLUDING, BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

The liability of the Company, at its sole option, under this warranty is expressly limited to the replacement or repair of the defective part thereof. IN NO EVENT SHALL THE COMPANY BE LIABLE OR RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND OR CHARACTER, NOR SHALL ITS LIABILITY EVER EXCEED THE PURCHASE PRICE PAID TO JOSLYN FOR SUCH DEFECTIVE PRODUCT.

This warranty is not transferable and may only be enforced by the original purchaser. Claims under this warranty must be submitted to Joslyn within thirty (30) days of discovery of any suspected product defect.

Warranty Period

ComTrack 10 Years from original date of purchase

SAVE THESE INSTRUCTIONS

NOTE: If devices are received damaged, notify the shipping company immediately. Retain all containers and packing materials for inspection.



5900 Eastport Boulevard, VA 23231-4453 USA
TEL: 804.236.3300 800.647.1911
www.tpsjoslyn.com

 
(PR) III145-Rev1 08/27/04

**Total Protection
Solutions** 

ComTrack™

SLP SERIES

SIGNAL LINE PROTECTORS

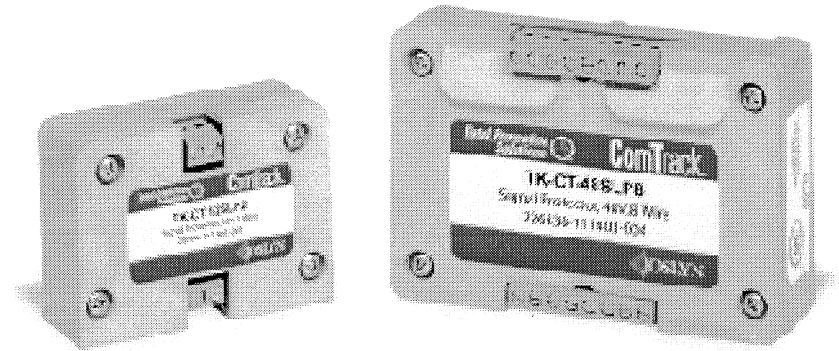

ALL MODELS CASE STYLES "A" AND "B"

USER MANUAL

INSTALLATION INSTRUCTIONS AND WARRANTY INFORMATION

CAUTION - IMPORTANT SAFETY INSTRUCTIONS

1. Never install during a lightning storm.
2. This product is for **INDOOR USE ONLY**.
3. SLP Series of suppressors are intended for use as primary protectors for signal and communication lines.
4. Read and understand all instructions prior to installation and operation.

INSTALLATION

The SLP Series of products is easy to install. The following instructions clearly explain each step:

NOTE: Make sure you follow the installation instructions exactly; if the suppressor is improperly installed, the current limiting feature could be rendered inoperable.

SLP Terminal Block Interface Models:

1. Connect the Load (protected) Side of the SLP Series product to your sensor / communications equipment using straight wire hookups as short as possible.
2. Connect your incoming (unprotected) wires / cable to the Line (unprotected) Side of the SLP Series product.
3. Connect a #14 AWG ground wire from the unit's ground stud and secure it to the nearest available chassis ground.

IF YOUR UNIT HAS A SHIELD POINT SEE NOTES BELOW!

NOTES: A. Some SLP units are equipped with a screw stud for shield termination. This is not a protected shield point nor is it intended as and should not be used as a ground point. Any of the four mounting screws may be used to ground the unit.

B. If your your specific unit's model number ends with a -S it is equipped with a protected shield screw stud. Do not use the shield screw stud as a system ground.

GROUNDING

The unit's ground stud must be connected to the ground reference used by the system being protected. In a computer room environment this grounding point may be the ground bar in the AC power panel. Ground leads longer than 12" are not recommended.

PERFORMANCE NOTE

The grounding wire must be as short as possible. Minimize length to the centimeter/inch and use a minimum of No. 14 AWG wire.

INDEPENDENT GROUNDS

Surge protection devices must not be connected to ground points that are independent of AC ground.

MOUNTING INFORMATION

 
The SLP Series is offered in 2 Case Sizes. Each unit is provided with a universal mounting bracket and a Din Rail clip(s). The bracket enables units to be mounted in several different planes as shown in the drawings.

The Din Rail clip is not necessary when mounting units to hard surfaces, however should you want to mount the device to a din rail, the clip mates to a standard DIN 35 Rail.


CASE A

MATERIALS

- 1 SLP Unit
- 1 Din Clip
- 1 Mounting Bracket
- 1 Screw

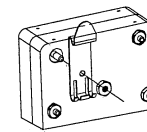




Attaching The Mounting Bracket:

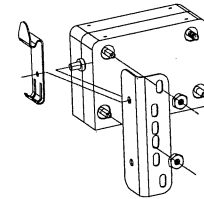 

Combination Use: Mounting Bracket & Din Rail Clip:

1. Secure Din Clip To Mounting Bracket With Hardware Provided
2. Remove Nuts From Case Studs.
3. Place Bracket onto Studs.
3. Replace Nuts & Secure.

   Attaching The Din Rail Mounting Clip:

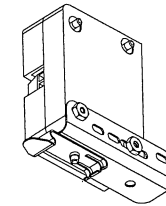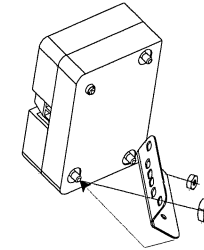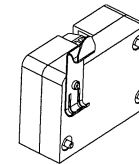



1. Remove Nut From Desired Stud Location.
2. Spin Din Clip on to the Stud.
3. Replace Nut & Secure.

1. Remove Nuts From Case Studs.
2. Place Bracket on to Studs.
3. Replace Nut & Secure.



CASE B

MATERIALS

  - 1 SLP Unit
- 2 Din Clips
- 1 Mounting Bracket
- 2 Screws

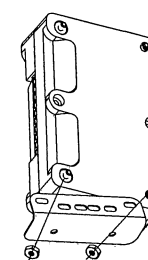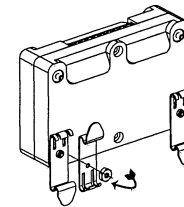

  Combination Use: Mounting Bracket & Din Rail Clip:

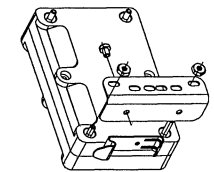

Mounting Bracket

1. Secure A Din Clip To The Mounting Bracket With Hardware Provided
2. Remove Nuts From Case Studs.
3. Place Bracket onto Studs.
4. Replace Nuts & Secure.

Grounding is accomplished via any of the four corner securing screws on the units. When the din rail clip is used it will pick up a ground connection becoming part of the unit's ground. A ground lug is also provided and can accommodate up to a #10 AWG ground wire. The ground lug can be secured to any one of the four corner screws in order to obtain a ground point. **NOTE:** It is always best to test grounds to verify their existence before relying on them to protect sensitive equipment.

WARNING

Should your equipment or building be subject to a direct lightning strike, this product will not provide complete protection.

NOTE: The protected device/equipment should also have AC protection because it is still vulnerable to transients on the power lines. Omitting AC protection poses a continued threat of failures at the communication interface.